



# WARNING

CURTAIN AND BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS.


## HANGING INSTRUCTIONS - PENCIL PLEAT CURTAINS

Ironing may be required before hanging - ensure iron is used on fabric side only.

### STEP 1.


Ensure that the 4 cords of the tape are securely knotted at one end of the curtain.

To Pencil Pleat the curtains, use the 2 outside cords of the 4 cords on the heading tape.

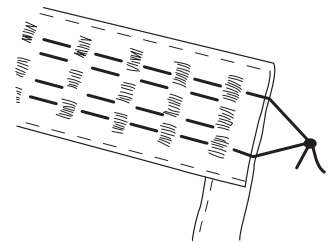

### STEP 2.


Hold the 2 outside cords and with your other hand gently push the heading along the cords until the fabric is pleated to its maximum, this forms the pleats. Ease the heading out again to the desired width, distributing the pleats evenly.

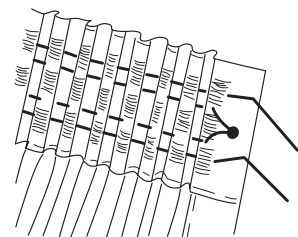

Tie a knot to hold them in place. Cut off the excess cord immediately past the knot to avoid a possible strangulation hazard. Ensure the end of the cord is minimum of 1600mm above the floor.

### STEP 3.


You will notice that the tape has 2 levels of hook pockets. This allows you to vary the finished length of your curtains. If you wish to hang the curtains below the track, use the top row of pockets for the curtain hooks. If you require the tracks to be covered, the bottom row should be used.

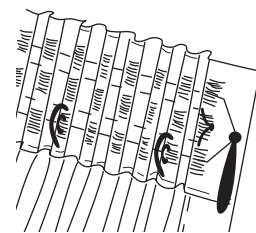

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above the floor level.

You must ensure that once installed to your satisfaction, the cords are tied and cut off the excess cord immediately past the knot to avoid a possible strangulation hazard. Ensure the end of the cord is minimum of 1600mm above the floor.

### BACK OF HEADER TAPE

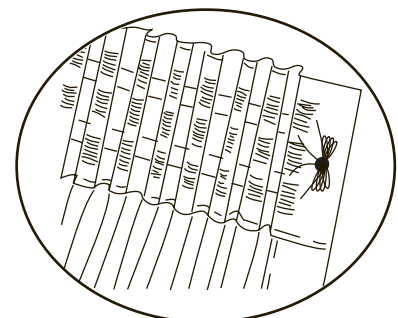



# WARNING


**CURTAIN AND BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS.**

## HANGING INSTRUCTIONS - PINCH PLEAT

Ironing may be required before hanging - ensure iron is used on fabric side only.

### STEP 1.

Ensure that the 4 cords of the tape are securely knotted at one end of the curtain.

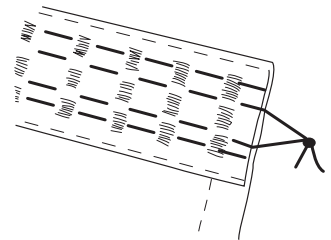


To Pinch Pleat the curtains, use the 2 inside cords of the 4 cords on the heading tape.

### STEP 2.

Hold the 2 inside cords and with your other hand gently push the heading along the cords until the fabric is pleated to its maximum, this forms the pleats. Ease the heading out again and ensure that the Pinch Pleats are evenly spaced across your desired width of curtains.


approximately 10cm

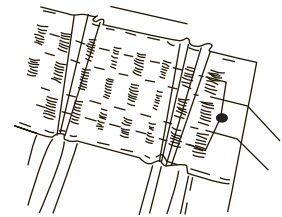

Tie a knot to hold them in place. Cut off the excess cord immediately past the knot to avoid a possible strangulation hazard. Ensure the end of the cord is minimum of 1600mm above the floor.

### STEP 3.

You will notice that the tape has 2 levels of hook pockets. This allows you to vary the finished length of your curtains. If you wish to hang the curtains below the track, use the top row of pockets for the curtain hooks. If you require the tracks to be covered, the bottom row should be used.

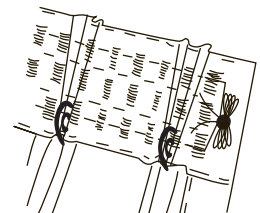

## BACK OF HEADER TAPE

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above the floor level.

You must ensure that once installed to your satisfaction, the cords are tied and cut off the excess cord immediately past the knot to avoid a possible strangulation hazard. Ensure the end of the cord is minimum of 1600mm above the floor.

