

## INSTALLATION INSTRUCTIONS - PENCIL PLEAT CURTAINS



# WARNING


**CURTAIN AND BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS.**

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

In order to install the product to avoid creating a possible strangulation hazard for children:

1. Ironing may be required before hanging - ensure iron is used on fabric side only.
2. Ensure that the four cords of the tape are securely knotted at one end of the curtain.
3. Gently pull the heading cords until all fabric is pleated to its maximum, this forms the pleats. Ease the heading out again to the desired width, distributing the pleats evenly. Tie a knot to hold them in place. Cut off the excess cord immediately past the knot to avoid a possible strangulation hazard. Ensure the end of the cord is minimum of 1600mm above the floor.
4. Insert your gathering hooks into the tape. Your curtain is now ready to hang on a curtain track.

### BACK OF HEADER TAPE

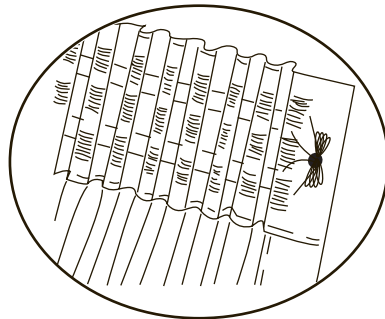

Ensure to cut off excess cord immediately past the knot to avoid a possible strangulation hazard.